



## VACUUM+ TIME

(for REGAL 0835 & 1642 with Sensor Control)

The Vacuum & Sensor Control is now included with each purchase of a Regal0835 & Regal0428 as an added bonus! The new Sensor Control function calculates when the pre-set percentage has been achieved ensuring the desired end vacuum is always reached, regardless of the volume.

When air inclusions appear in the product, it may be desirable to prolong the vacuum time after reaching the maximum vacuum. This process is meant to let enclosed air escape from the product. The Vacuum+ time is set in seconds. If a Vacuum+ time is set, a dot will appear in the lower right corner of the parameter display.

1. Use the Cursor key to scroll to the parameter Vacuum. The LED in front of the selected function will light up.
2. Press the + / VACUUM STOP button to adjust the value to the maximum vacuum percentage of 99%. The + / VACUUM STOP button must be pressed and held for several seconds to adjust the value. This prevents the accidental changing of settings.
3. Press the Cursor key once to select the Vacuum+ time. The display shows 0. The LED stays lit in front of VACUUM.
4. Press the buttons - / STOP and + / VACUUM STOP to change the value in seconds. A dot will appear in the lower right corner of the parameter display when the value is set.
5. Wait a few seconds or press the Cursor key to activate the new parameter.